

Automobile Preventative Maintenance Program

Every 5,000 miles

- Change the engine oil (more often if high mileage)
- Change the oil filter
- Lube the chassis
- Check all fluid levels
- Check all drive belts
- Check all hoses

Every 15,000 miles

- Replace air filter and element
- Replace fuel filter
- Replace crankcase ventilation valve

Every 24,000 miles

- Change the transmission fluid and filter

Every 6 months

- Rotate the tires
- Inspect the brake linings
- Inspect the hoses
- Inspect the power steering
- Inspect the shocks

Every year

- Car should be tuned up once a year in the fall
- Have front end checked for alignment

Every two years

- Antifreeze should be drained and the system flushed
- Refill with antifreeze and a water pump lubrication conditioner